
Grease Trap CAT# SEP-GREASE

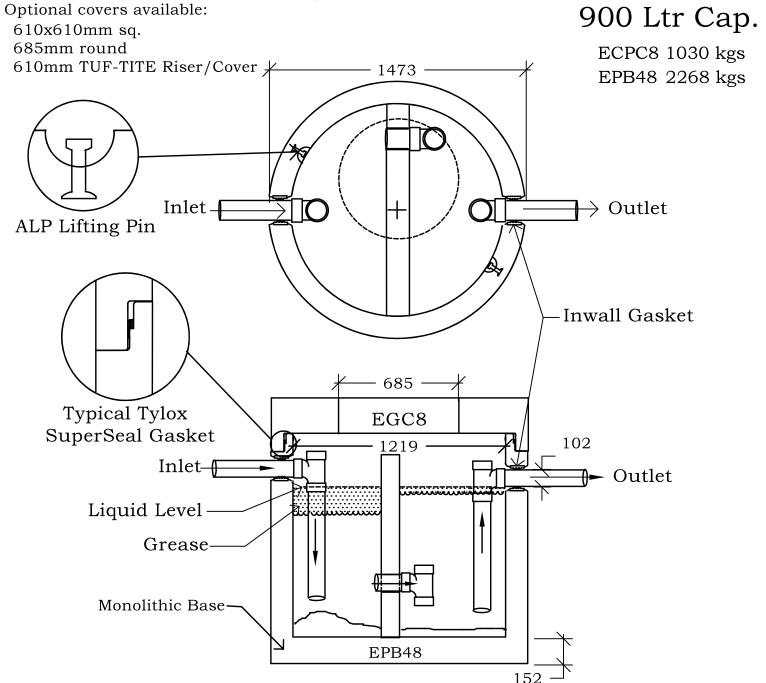

Phone: (902) 665-4444 Fax: (902) 665-4017

P.O Box 399, Bridgetown Nova Scotia, BOS 1C0 www.riceconcrete.ca



Maintain unit as per NS Environment Section 03 Technical Guidelines

Regular inspection is important to ensure the draininage system is working properly. When the unit is first commissioned, it is recommended that the levels of solids and oil or grease be checked at weekly intervals for food applications to determine how much material is accumulating. Oil separators in garages should be checked monthly to start. These observations will help establish the best maitenance interval based on site specific conditions.

SEP-12